

## Furnaces Product List

List Current as of June 28, 2004

Manufacturer Name	Product Family Name	Fuel Type	Model Series
Adams Manufacturing	Condensing Oil Furnace		AHEO Series Oil Furnaces
Adams Manufacturing	Condensing Oil Furnace		ASHEO Series Oil Furnaces
Air-Ease	Ultra SX 90		All models beginning with GUK or GCK
Air-Ease	Ultra SX 93		All models beginning with GU 93
Air-Ease	Ultra SX 95		All models beginning with GU 95
Air-Ease	Ultra V Advantage 93		All models beginning with G1D93
Air-Ease	Ultra V Enhanced 95		All models beginning with G1D95
Air-Ease	Ultra V Tech 90		All models beginning with G1D90
Air-Ease	Ultra V Tech 91		All models beginning with G1D91
AirQuest	94V		All models beginning with NTVM
AirQuest	DC 90 (downflow/horiz)		All models beginning with NCGM
AirQuest	DC 90 (upflow/horiz)		All models beginning with NTGM
AirQuest	DLX 90 Series		All models beginning with H9MPD
AirQuest	DV 90		All models beginning with NTGS
AirQuest	DV 90		All models beginning with NUG9
AirQuest	IIS 90 Series		All models beginning with H9MPT
AirQuest	NCPM		All models beginning with NCPM
AirQuest	NTGS		All models beginning with NTGS
AirQuest	NTPM		All models beginning with NTPM
AirQuest	PS 90 Series		All models beginning with N9MP1
AirQuest	PS 90-DV Series		All models beginning with N9MP2
Airco	Ultramax III	Gas	GTH - 50, 70, 85, 100
Aire-Flo		Gas	AF90MPxxxxxx
Allstyle		Gas	CCA Series
Allstyle		Gas	CSA Series
Allstyle		Gas	VCA Series
Allstyle		Gas	VSA Series
Amana	Air Command 90		All models beginning with GUCA and GCCA
Amana	Air Command 90 II		All models beginning with GUSA
Amana	Air Command 95 II Q		All models beginning with GUYA and GCVA
Amana	Gas Furnace	Gas	GCCA
Amana	Gas Furnace	Gas	GCVA
Amana	Gas Furnace	Gas	GUCA
Amana	Gas Furnace	Gas	GULA

Amana	Gas Furnace	Gas	GUSA
Amana	Gas Furnace	Gas	GUVA
American Standard	Freedom 90		Models with AUY ,ADY, AUC, ADC, AUX ,ADX
Arcoaire	(None)		All models beginning with GUM
Arcoaire	94V		All models beginning with VNK
Arcoaire	DC90 (downflow/horiz)		All models beginning with NCGM
Arcoaire	DC90 (upflow/horiz)		All models beginning with NTGM
Arcoaire	DLX 90 Series		All models beginning with H9MPD
Arcoaire	DV90		All models beginning with NTG9
Arcoaire	Enviroplus 90		All models beginning with GUK, GDK, GCK
Arcoaire	GCK (downflow/horiz)		All models beginning with GCK
Arcoaire	GNK (upflow/horiz)		All models beginning with GNK
Arcoaire	GNM		All models beginning with GNM
Arcoaire	GNP		All models beginning with GNP
Arcoaire	IIS 90 Series		All models beginning with H9MPT
Arcoaire	NTGS		All models beginning with NTGS
Arcoaire	PS 90 Series		All models beginning with N9MP1
Arcoaire	PS 90-DV Series		All models beginning with N9MP2
Arcoaire	TCK 90		All models beginning with TCK
Arcoaire	TNK 92		All models beginning with TNK
Arcoaire	VS 90 Series		All models beginning with H9MPV
Arcoaire	VS 90 Series		All models beginning with H9MPV
Armstrong Air	Ultra SX 90		All models beginning with GUK or GCK
Armstrong Air	Ultra SX 93		All models beginning with GU 93
Armstrong Air	Ultra SX 95		All models beginning with GU 95
Armstrong Air	Ultra V Advantage 93		All models beginning with G1D93
Armstrong Air	Ultra V Enhanced 95		All models beginning with G1D95
Armstrong Air	Ultra V Tech 90		All models beginning with G1D90
Armstrong Air	Ultra V Tech 91		All models beginning with G1D91
Bryant	Condensing Furnace		All models beginning with 340MAV
Bryant	Condensing Furnace		All models beginning with 345MAV
Bryant	Condensing Furnace		All models beginning with 351DAS
Bryant	Plus 90		All models beginning with 350MAV
Bryant	Plus 90i		All models beginning with 355MAV
Bryant	Plus 90t		All models beginning with 352MAV
Bryant, Day&Night, Payne	Condensing Furnace		All models beginning with 340MAV
Bryant, Day&Night, Payne	Condensing Furnace		All models beginning with 345MAV

Bryant, Day&Night, Payne	Plus 90		All models beginning with 350MAV
Bryant, Day&Night, Payne	Plus 90i		All models beginning with 355MAV
Carrier	Condensing Furnace		All models beginning with 58MCA
Carrier	Condensing Furnace		All models beginning with 58MCA
Carrier	Condensing Furnace		All models beginning with 58MSA
Carrier	Condensing Furnace		All models beginning with 58MSA
Carrier	Infinity		All models beginning with 58MVP
Carrier	Infinity		All models beginning with 58MVP
Carrier	WeatherMaker		All models beginning with 58MXA
Carrier	WeatherMaker 9300TS		All models beginning with 58MTA
Carrier	Weathermaker		All models beginning with 58MXA
Coleman	Condensing Furnace		G9D
Coleman	Condensing Furnace		G9D
Coleman	Condensing Furnace		G9T
Coleman	Condensing Furnace		G9V
Coleman	Condensing Furnace	Gas	GM9
Coleman (Custom)	Condensing Furnace		FG9
Coleman-Evcon	90% Down flow		DGAD060CD
Coleman-Evcon	90% Down flow		DGAE080CD
Coleman-Evcon	90% Down flow		DGAF100CD
Coleman-Evcon	Condensing furnace		Models beginning with G9
Comfort-Aire, Century	Conquest 90		ELDH45-E3
Comfort-Aire, Century	Conquest 90		FLUA120-E5
Comfort-Aire, Century	Conquest 90		FLUA45-E3
Comfort-Aire, Century	Conquest 90		GLUA105-E5
Comfort-Aire, Century	Conquest 90		GLUA60-E3
Comfort-Aire, Century	Conquest 90		GLUA75-E3
Comfort-Aire, Century	Conquest 90		GLUA75-E4
Comfort-Aire, Century	Conquest 90		GLUA90-E5
Comfortmaker	(None)		All models beginning with GUM
Comfortmaker	94V		All models beginning with VNK
Comfortmaker	DLX 90 Series		All models beginning with C9MPD
Comfortmaker	Enviroplus 90		All models beginning with GUK, GDK, GCK
Comfortmaker	GCK (downflow/horiz)		All models beginning with GCK
Comfortmaker	GNK (upflow/horiz)		All models beginning with GNK
Comfortmaker	GNP		All models beginning with GNP
Comfortmaker	IIS 90 Series		All models beginning with C9MPT

Comfortmaker	NTGS		All models beginning with NTGS
Comfortmaker	PS 90 Series		All models beginning with N9MP1
Comfortmaker	PS 90-DV Series		All models beginning with N9MP2
Comfortmaker	TCK 90		All models beginning with TCK
Comfortmaker	TNK 92		All models beginning with TNK
Comfortmaker	VS 90 Series		All models beginning with C9MPV
Concord	Concord 90		All models beginning with CG90
Corsaire	FURN/ 90		All models beginning with FGRJ, FGTJ
Dornback Furnace Division	HEO Series, Oil Fired		All models beginning with HEO
Dornback Furnace Division	SHEO Series, Oil Fired		All models beginning with SHEO
Ducane	Fits-All	Gas	CMPxxxxxx
EVCON	Condensing Furnace	Gas	GF9
EVCON			All models beginning with DGU or DGD
Fraser-Johnston			All models beginning with P*HD, P*LU or P*ND
Frigidaire	Condensing Furnace		All FG6RC models
Frigidaire	Condensing Furnace		All FG6RL models
Frigidaire	Condensing Furnace		All FG6T models
Gibson	Condensing Furnace		All KG6RC models
Gibson	Condensing Furnace		All KG6RL models
Goodman Manufacturing	Gas Furnace	Gas	GMNT
Goodman Manufacturing	Gas Furnace	Gas	GMNTE
Grandaire	Condensing Furnace		All KG6RC models
Grandaire	Condensing Furnace		All KG6RL models
Heil	94V		All models beginning with NTVM
Heil	DC90		All models beginning with NUGM, NDGM, NCGM
Heil	DC90 (downflow/horiz)		All models beginning with NCGM
Heil	DC90 (upflow/horiz)		All models beginning with NTGM
Heil	DLX 90 Series		All models beginning with H9MPD
Heil	DV90		All models beginning with NTG9
Heil	DV90		All models beginning with NUG9
Heil	IIS 90 Series		All models beginning with H9MPT
Heil	PS 90-DV Series		All models beginning with N9MP2
Heil	QuietComfortTM II (downflow/horiz)		All models beginning with NCPM
Heil	QuietComfortTM II (upflow/downflow)		All models beginning with NTPM
Heil	VS 90 Series		All models beginning with H9MPV
Intertherm	Condensing Furnace		All G6RL models

Intertherm	Condensing Furnace		All G6RC models
Intertherm	Condensing Furnace		All G6T models
Intertherm	Condensing Furnace		All M2R models
Intertherm	Condensing Furnace	Gas	All M3RL models
Kelvinator	Condensing Furnace		All G6RC models
Kelvinator	Condensing Furnace		All G6RL models
Kelvinator	Condensing Furnace		All G6T models
Lennox	Complete Heat		All models beginning with AM30/HM30
Lennox	Dimension Gas Furnace		All models beginning with G32
Lennox	Dimension Gas Furnace		All models beginning with GHR32
Lennox	Elite 90 Gas Furnace		All models beginning with G26 or GHR26
Lennox	G41UF	Gas	All Models beginning with G41
Lennox	G51MP	Gas	All models beginning with G51
Lennox	G61MP	Gas	All models beginning with "G61MP-"
Lennox	G61MPV	Gas	All models beginning with G61MPV
Lennox	HM61	Gas	Models beginning with HM61-100
Lennox	HM61	Gas	Models beginning with HM61-150
Lennox	Pulse 21 Gas Furnace		All models beginning with G21 or GSR21
Lennox	Pulse 21V Gas Furnace		All models beginning with G21V or GSR21V
Luxaire	Condensing Furnace	Gas	GM9
Luxaire	High Performance		G9T
Luxaire	High Performance		P*LU or P*LD
Luxaire	Peak Performance		G9V
Luxaire	Performance Plus		G9D
Luxaire (Basis)	Condensing furnace		FG9
Maytag	Condensing Furnace		All PGF1RC models
Maytag	Condensing Furnace		All PGF1RL models
Maytag	Condensing Furnace		All PGF1T* models
Meridian		Gas	CCA Series
Meridian		Gas	CSA Series
Meridian		Gas	VCA Series
Meridian		Gas	VSA Series
Miller	Condensing Furnace		All G6RC models
Miller	Condensing Furnace		All G6RL models
Miller	Condensing Furnace		All M2R models
Miller	Condensing Furnace	Gas	All M3RL models
Olsen	Ultramax III	Gas	GTH-50, 70, 85, 100

Oneida Royal	Ultramax III	Gas	GTH - OR - 50, 70, 85, 100
Payne	Condensing Furnace		All models beginning with 490AAV
Payne	Condensing Furnace		All models beginning with PG9
Philco	Condensing Furnace		All G6RC models
Philco	Condensing Furnace		All G6RL models
Philco	Condensing Furnace		All G6T models
ProSeries		Gas	PSCMPxxxxxx
Rheem	FURN/Classic 90		All models beginning with RGRJ, RGTJ
Rheem	FURN/Classic 90 Plus		All models beginning with RGRA, RGTA
Rheem	FURN/Classic 90 Plus w/CCC		All models beginning with RGFD, RGGD
Rheem		Gas	Models beginning with RGRK
Ruud	FURN/Achiever 90		All models beginning with UGRJ, UGTJ
Ruud	FURN/Achiever 90 Plus		All models beginning with UGRA, UGTA
Ruud	FURN/Achiever 90 Plus w/CCC		All models beginning with UGFD, UGGD
Ruud		Gas	Models beginning with UGRK
TFC		Gas	CCA Series
TFC		Gas	CSA Series
TFC		Gas	VCA Series
TFC		Gas	VSA Series
Tappan	Condensing Furnace		All FG6RC models
Tappan	Condensing Furnace		All FG6RL models
Tappan	Condensing Furnace		All FG6T models
Tempstar	94V		All models beginning with NTVM
Tempstar	DC 90		All models beginning with NUGM, NDGM, NCGM
Tempstar	DC90 (downflow/horiz)		All models beginning with NCGM
Tempstar	DC90 (upflow/horiz)		All models beginning with NTGM
Tempstar	DLX 90 Series		All models beginning with T9MPD
Tempstar	DV 90		All models beginning with NTG9
Tempstar	DV 90		All models beginning with NUG9
Tempstar	IIS 90 Series		All models beginning with T9MPT
Tempstar	NTGS		All models beginning with NTGS
Tempstar	PS 90 Series		All models beginning with N9MP1
Tempstar	PS 90-DV Series		All models beginning with N9MP2
Tempstar	SmartComfortTM II (downflow/horiz)		All models beginning with NCPM
Tempstar	SmartComfortTM II (upflow/downflow)		All models beginning with NTPM
Tempstar	VS 90 Series		All models beginning with T9MPV

Texas Furnace, LLC	Meridian + 90	Gas	CSA Series
Texas Furnace, LLC	Meridian + 90	Gas	VSA Series
Texas Furnace, LLC	TFC + 90	Gas	CSA Series
Texas Furnace, LLC	TFC + 90	Gas	VSA Series
Thermal Zone	90% Downflow Furnace		All models beginning with GD***M
Thermal Zone	90% Multi Position Furnace		All models beginning GU***M
Thermal Zone	93% Upflow Furnace		All models beginning with GU***N
Thermal Zone	Condensing Furnace		All G6RC models
Thermal Zone	Condensing Furnace		All G6RL models
Thermal Zone	Condensing Furnace		All G6T* models
ThermoPride	90%+ Condensing Series	Gas	All models beginning with CHBI or CDBI
ThermoPride	Downflow, fixed input, condensing furnace	Natural or Propane gas	All models beginning with CDB
ThermoPride	Downflow, two-stage, condensing furnace	Natural or Propane gas	All models beginning with CDX
ThermoPride	Premiere Series CHXI/CDXI	Gas	All models beginning with CHXI or CDXI
ThermoPride	Upflow, fixed input, condensing furnace	Natural or Propane gas	All models beginning with CHB
ThermoPride	Upflow, two-stage, condensing furnace	Natural or Propane gas	All models beginning with CHX
Trane	XB90		All models beginning with TDC
Trane	XB90		All models beginning with TUC
Trane	XL90		All models beginning with TDX-R
Trane	XL90		All models beginning with TUX-R
Trane	XR 90		All models beginning with TDX
Trane	XR 90		All models beginning with TUX
Trane	XV 90		All models beginning with TDY
Trane	XV 90		All models beginning with TUY
WeatherKing	FURN / 90		All models beginning with 90RJ, 90TJ
WeatherKing	FURN/Select 90		All models beginning with WGRJ, WGTJ
WeatherKing	FURN/Select 90 Plus		All models beginning with WGRA, WGTA
WeatherKing	FURN/Select 90 Plus w/CCC		All models beginning with WGFD, WGGD
Westinghouse	Condensing Furnace		All FG6RC models
Westinghouse	Condensing Furnace		All FG6RL models
Westinghouse	Condensing Furnace		All FG6T* models
Xenon	Condensing Furnace	Gas	Models beginning with XF90
Xenon	Condensing Furnace	Gas	Models beginning with XF9V
Xenon	Condensing Furnace	Gas	XYF9
York International	Condensing Furnace	Gas	GM9
York International	Condensing furnace		FG9
York International	Deluxe Diamond 95 Series		P*XU

York International	Diamond 90 Series		P*DR
York International	Diamond 90 Series		P*UR, P*DH
York International	Diamond 95 Ultra Series		P*XU-V, PXD-V
Zephyr	FURN/ 90		All models beginning with EGRJ, EGTJ